



2005-08 Mustang V6 Fiberglass Chin Spoiler Part# 425355



Item Checklist

Qty	Description
1	Chin Spoiler
6	Stainless Steel 1/4" x 20 x 1" Bolts
6	Stainless Steel Nuts
12	1/4" Flat Washers
6	1/4" Lock Washers

Tools Needed

Drill
5/16" Drill Bit
Two 7/16" Wrenches
3-4 Spring Clamps or Clamping Pliers
Floor Jack with Jack Stands
Eye Protection

You will need to test fit all parts on your car before they can be painted

Please read all of these instructions before beginning the installation. Check to make sure that all of the carton contents are in the box. Get all tools necessary to finish the job together beforehand, so that everything will be at hand when doing the install. If you have any questions about the installation process, or if you are missing any hardware, please call us at the number below.



1. Before installing your chin spoiler, make sure that all 6 of the bolt locations are drilled out. If the holes are not drilled from the factory, there will be locators at each spot that will need to be drilled with a 5/16" drill bit.




2. Using caution and safe procedures, jack the car up and place onto jack stands at a safe level for working under the car.
3. Place the chin spoiler up against the front bumper cover, and hold in place with spring clamps or clamping pliers.
4. Line up the edges of the spoiler with the sides of the bumper cover, keeping the gap on both side of the spoiler equal.



5. You can now mark the 6 locations on the bottom of the bumper cover. Remove the chin spoiler, and drill out those 6 locations.

6. Replace the chin spoiler, and insert the bolt and flat washer from the bottom, and a flat washer, a lock washer, and the nut on the top side.

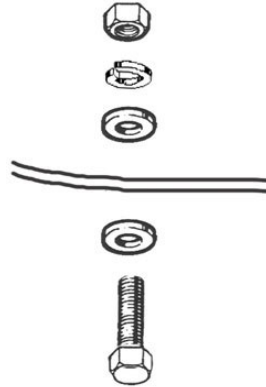

7. After you have test fit the spoiler, and the fit is good, you can now paint and install it permanently.